



(845)225-9200

Cotton Candy Instructions

INSTRUCTIONS:

- 1. Plug in Machine.**
- 2. Fill floss head 90% full with floss sugar.**
- 3. Moisten inside of floss pan with damp cloth so floss will adhere to pan.**
- 4. Turn machine heat and motor switch "ON".**
- 5. Hold the cone an inch or two at the pointed end between two fingers and thumb.**
- 6. Break the web of floss with light flicking motion.**
- 7. Lift up the cone with ring of floss attached and wind the floss onto cone.**
- 8. Enjoy you cotton candy.**

CLEANING:

- 1. DO NOT CLEAN MACHINE AND FLOSS HEAD.**
- 2. RINSE OUT FLOSS PAN WITH WATER.**